



HodgeClemco

A SURFACEPREP COMPANY

Owners Manual


RM 2000 Deadman Handle

Parts Identification List

Item	Part No.	Description
10	RM 22	RUBBER INSERT
9	RCAMV 9	ADAPTOR
8	RM 90	PLUG
7	RM 93	LEVER LOCK
6	RM 97	HANDLE SPRING
5	RM 99	HANDLE BLADE
4	RM 96	O- RING
3	RM 98	PIVOT PIN
2	RM 41	EXTERNAL CIRCLIP
1	RM 95	PISTON

Optional Extra
RM 88 Slide Valve Kit
Easily fitted to RM2000
when used in
conjunction with
remote Control Abrasive
metering Valve

18	RCAMV9A	ADAPTOR
17	RCAMV8	ELBOW
16	RM23	ADAPTOR
15	RCAMV11	SLIDE VALVE

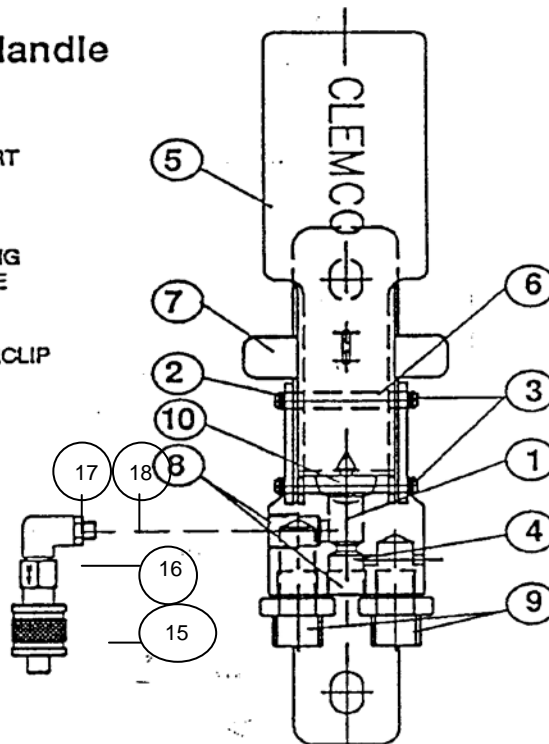

Installation Instructions

The RM 2000 Deadman Handle is designed for use with Hodge Clemco blast machines incorporating a remote control system. These instructions must be used in conjunction with those contained in the blast machine Owner's Manual.

WARNING: Ensure compressed air supply is turned OFF and disconnected prior to fitting.

1. Remove existing deadman handle & securely fit the RM 2000 to the blast hose adjacent to the nozzle holder using hose ties.
2. Securely connect the 1/4" 'red' supply control hose to port 1 on the rear of the RM 2000 & the 1/4" 'yellow' signal hose to port 2.
3. Using tape or hose ties secure the control hoses to the blast hose at metre intervals to prevent snagging.
4. Check rubber insert is in good condition & correctly positioned.
5. Check handle lever & lever lock operate freely.
6. Follow normal operating procedures in blast machine Owner's Manual.